

1. Open the dust cover flap and slide the switch to on. A beep and the LED light flashing indicate the unit has been



2. A series of beeps and the LED is blinking rapidly indicates the speaker battery needs to be charged. Plug the the included micro-USB cable into the speaker and into a charger or computer for charging.

Charge the speaker for at least 20 minutes before use.



3. To pair with your device (phone, tablet, etc.), please turn on your device's Bluetooth and follow device instructions to pair with "Sticky SP".



■ Go to: SETTINGS>BLUETOOTH

■ Turn on Bluetooth

■ Getting Started

turned on.

■ The device will automatically search for AVAILABLE DEVICES. If not, press SEARCH FOR DEVICES. Select Mushroom and the device will automatically connect to the speaker. It will then show it is connected to "Sticky SP".

SETTINGS> GENERAL> BLUETOOTH

For iOS (iPhone/ iPad) Users:

■ Turn on Bluetooth

■ The device will automatically search for Discoverable Devices. If not, press SEARCH FOR DEVICES, Select Sticky_SP and select yes when it asks to pair up. It will then show it is connected to "Sticky_SP".

1. When using the speaker, you can adjust the volume by pressing the "+ " or "-" key on the speaker.



2. Answering calls on a paired phone. When receiving a call, press the "<" key to answer the phone. Press the "<" key during a call to hang up. To redial, last number, hold down the "<" key.



3. The microphone on your speaker is on the upper right of the Vol "- " key. Talk into that during phone calls. The microphone is useful for group or conference calls.



4. Use the suction cup to attach the speaker to any surface (glass, glossy wall, ceramic, etc). You can put in on the back of your phone/ tablet to use as a stand. Place it on your car's window/ dashboard and use the speaker as a hands-free mic for calls.

There are many other ways to use your speaker! Enjoy!



■ SAFETY WARNING

To reduce the risk of electric shock or damage to your equipment:

- Plug the USB cable into a device that only has the correct USB port.
- Disconnect power from the speaker by unplugging the USB cable from the USB port, not from the micro-USB port on the speaker.
- Avoid contact with water or other wet surfaces.
- Avoid inserting items into the openings of the speaker.

13

- Do not disassemble your speaker. Only a certified service technician should perform repairs on your speaker. Otherwise, The Mushroom Wireless is not responsible for any damages that may result in the disassembly.
- CAUTION: Batteries should not be exposed to excessive heat such as fire, sunlight, or other concentrated heat sources. There is a risk of explosion if the battery is replaced with an incorrect battery type.

■ The information contained herein is subject to change without notice.

Heimmit erlärt die ASSMANN Electronic GmbH, dass der Artikel In Übereinstimmung mit den Anforderungen und Vorschriften der Richtlinie 1999/SEG befiede. Die vollständige Konformätisserkfärung können Sie unter hitp://www.assmann.com. anfordern. Der Artikel ist zur Verwendung in den folgenden Ländern bestämt.



10

14

(DE) Bundesrepublik Deutschland (AT) Österreich



For other languages please see www.assmann.com



15

11